

# INSTRUCTION MANUAL

## 2 DOORS NO FROST REFRIGERATOR

**MODEL:**


**HTMR315**

**HTMR360**

### INDEX

FEATURES	2
INSTALLATION	3
OPERATION	4
CLEANING	6
CAUTION	7
TROUBLE SHOOTING	8
 
# FEATURES

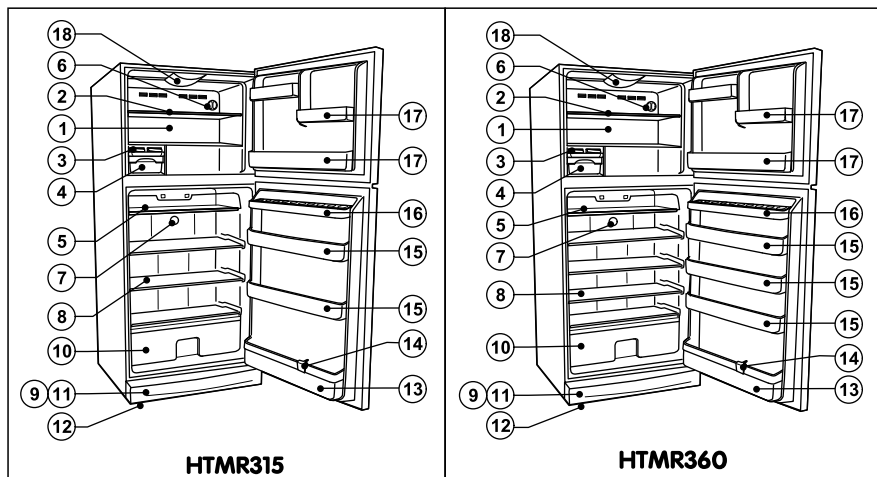


1. Freezer Compartment
2. Freezer Shelf
3. Twist Ice Maker
4. Ice Cube Box
5. Meat Tray
6. Temperature Control
7. Multi-Airflow Control
8. Refrigerator Shelf
9. Evaporator Drain Tray

10. Vegetable Crisper
11. Kick Plate
12. Adjustable Leg
13. Bottle Rack
14. Bottle Locker
15. Canned Food Rack
16. Egg Rack
17. Utility Rack
18. Freezer Lamp

## ■ Suggestion





 
### Relocation of refrigerator.

- Disconnect the power cord.
- Remove water from the evaporating tray.
- Take food out of the refrigerator compartments.
- Fasten the doors with tape while moving to prevent them from opening
- For safety, use 2 people to carry the refrigerator.
- Do not lift the unit in a horizontal angle, however, it may be 45 degrees tilted slightly.

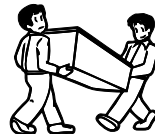

# **INSTALLATION**

     1. Select a place with strong, level floor. If the floor is not quite level, adjust the height of screw accordingly.
2. Allow at least 30 cm. space above the unit, 15 and 10 cm. at the back and sides to allow air ventilation. If the ventilation is less than this the compressor will need to work harder.
3. Avoid direct sunlight and heat. Direct sunlight may affect the enamel coating. Heat sources nearby will cause higher electricity consumption.
4. Avoid very moist place. Too much moisture in the air will cause frost to form very quickly on the evaporator, and the refrigerator will have to be defrosted very frequently.
5. Don't connect multiple appliances to one outlet. It may cause fire. To avoid the possibility of electrical shock, ground the refrigerator properly.

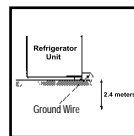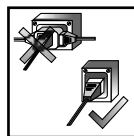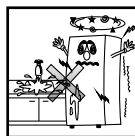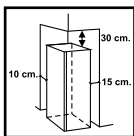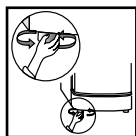

# **OPERATION**

## **■ Making a test run**

1. Clean the Refrigerator thoroughly. Wipe the external surface with a soft dry cloth, the interior with a damp cloth.
2. Keep the door open and plug the power cord into its own electrical outlet. The interior lamp should be lit.
3. Turn the thermostat dial to "7" or "MAX". Close the door and allow the unit to operate for 15-20 minutes. The evaporator should then show some traces of frost. The compressor will run smoothly with just a soft humming sound.
4. If the test run is not satisfactory, check your power supply (blown fuse). Contact your appliance dealer or appliance authorized Service Center if the source of trouble cannot be traced.

# **OPERATION**

## ■ **Temperature Control**

The refrigerator is equipped with 2 independent controls to control the degree of cooling of the refrigerator and freezer compartment.

### ● **Freezer Compartment**

MIN. : Minimum Setting for fairly cold in freezer compartment.

MED. : Medium Setting for colder in freezer compartment.

MAX. : Maximum Setting for the coldest in freezer compartment.

### ● **Refrigerator Compartment**

 
MIN. : Low volume of air circulation in refrigerator compartment.

MED. : Medium volume of air circulation in refrigerator compartment.

MAX. : High volume of air circulation in refrigerator compartment.

## ■ **Making Ice Cubes**

- Ice cubes are made in Twist Ice Maker, turn the lever clockwise to empty the ice into Ice Cube Box.
- Store the ice cubes in the Ice Cube Box.  
Do not store wet ice cubes or they will stick together.
- Do not use the "Ice Cube Box" as an ice making tray, or it will be damaged.

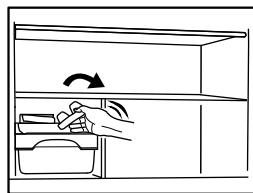

## ■ **How to Defrost**

The defrosting will automatically operate. No manual control is required.  
The defrosted water will drain into the evaporation tray and automatically evaporate.

# OPERATION

## ■ Food Storage

 
1. Refrigerated air goes down at the rear of the fresh food compartment and rises up at the front. Store the foodstuffs such as fish and meats which require quick refrigeration to the rear of the compartment.
2. Leave spaces among foodstuffs to help air circulation.  
Leave 10 cm. at the back and sides to allow air ventilation.
3. Foodstuffs which are easily dried should be well wrapped with waxed paper, aluminum foil or plastic film.
4. Wrap fish and smoked meats in moisture-vapour-proof material to prevent transfer for odours.
5. Pre-cool hot foods, wrap them with plastic film or put them in the airtight receptacle.
6. Wipe the water on the surface of the bottles before storing them.
7. Be sure not to store bottles such as beer, cokes, etc. in the freezer compartment.
8. Do not put vegetables which are liable to freeze at the rear part of the shelves.
9. If planning to keep fresh fish and meats for a long period, wrap them.



## ■ Cleaning the Evaporator Drain Tray

Since dust accumulated on the evaporator drain tray will decrease the evaporation efficiency, remove the tray to clean. If the tray is not securely in place, defrosted water may spill or the evaporation process may be hindered.

**Suggestion :** *The Evaporator Drain Tray should be cleaned at least once a month*

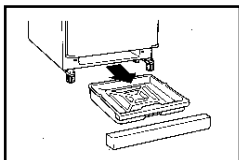

# **CLEANING**

Your refrigerator does not require any special maintenance. To clean the inside, use a soft cloth with water, mild soap suds, or some mild detergent. Wash ice cube tray, evaporation tray and shelves in a mild detergent solution and dry with a soft towel. Stains on the outside can also be removed with a soft cloth and some mild detergent.

- Removable parts may be rinsed with water.
- Don't forget to clean the door gasket especially the bottom gasket is liable to get dirty.
- Wipe the door with a dry cloth when water splashes on it or it may rust.
- Occasionally remove dust and other particles which may collect at the back of the refrigerator and on the condenser under the cabinet to keep heat radiating efficiency high. For safety, unplug the refrigerator before cleaning.



## **■ Lamp Replacement**

If the lamp does not work properly and a replacement bulb is needed please contact a service agent or similarly qualified person.

### **Procedure :**

1. Disconnect the plug of the refrigerator from the outlet.
  2. Take the Lamp Cover off.
  3. Take the bulb off by turning it counter-clockwise.
  4. Change the bulb and turn it clockwise.
- The bulb E12, 10W characteristic at Freezer Compartment (Only model with Freezer Lamp).
  - The bulb E14, 15W characteristic at Refrigerator Compartment

**Caution :** To prevent any breakage do not over tighten the lamp to socket. It is highly recommended to have the service agent or qualified person to do the lamp replacement.

# **CAUTION**

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Do not use inflammable sprays such as lacquer and paint near the refrigerator, because there is a danger of igniting.
3. Do not operate the refrigerator in the presence of explosive gas to avoid a fire or an explosion by ignition of the electric contact of the refrigerator.
4. Be careful no to splash water on the back of the refrigerator the insulation of electric parts will be impaired by water.
5. Do not touch the sides and back of the refrigerator cabinet and the mechanical parts at the back of the refrigerator, because their temperature is high.
6. If the unit is turned off or unplugged, you must allow at least seven minutes before restarting or replugging the unit.
7. Do not use acids, chemical thinner, gasoline or benzene for cleaning any part of the refrigerator. Boiling water and benzene are especially harmful for plastic parts.
8. If the lamp does not work properly and a replacement bulb is needed please contact a service agent or similarly qualified person.
9. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
10. Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
11. Do not use mechanical devices or other means to accelerate the defrosting process.
12. Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
13. Do not damage the refrigerant circuit.
14. Children should be supervised to ensure that they do not play with the appliance.
15. This fridge is Cyclopentane insulation, should be kept away from heat or flame.

*Ensure this refrigerator is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detail, please contact your local city office or your household waste disposal service.*

# **TROUBLE SHOOTING**

Before you call for service please check the table below. Your problems could be easily rectified. If you still need service, please contact the store where you purchased or the nearest service center.

<b>When</b>	<b>Check if ...</b>
<b>not operating ...</b>	<ul style="list-style-type: none"><li>● Power supply cord is unplugged.</li><li>● Temperature control in "0" position.</li><li>● If home fuse blown or circuit breaker off ?</li></ul>
<b>warmer than usual ...</b>	<ul style="list-style-type: none"><li>● Too frequent or too long door openings.</li><li>● Check the temperature control dial setting.</li><li>● Large amounts of food placed in refrigerator.</li><li>● Warm food placed in the refrigerator.</li></ul>
<b>unusual sounds ...</b>	<ul style="list-style-type: none"><li>● The floor is weak or uneven.</li><li>● Make sure the back of the refrigerator does not touch the wall.</li></ul>
<b>motor operates for long periods ...</b>	<ul style="list-style-type: none"><li>● Normal when refrigerator is first delivered to your home - usually requires 24 hours to completely cool down.</li><li>● Large amounts of food placed in refrigerator to be cooled or frozen.</li><li>● Hot weather - frequent door openings.</li><li>● Door left open.</li><li>● Temperature control is set too cold.</li></ul>
<b>moisture collects inside ...</b>	<ul style="list-style-type: none"><li>● Too frequent or too long door openings.</li><li>● In humid weather, air carries moisture into refrigerator when door is opened.</li><li>● Warm food placed in the refrigerator.</li></ul>